


Installation Manual

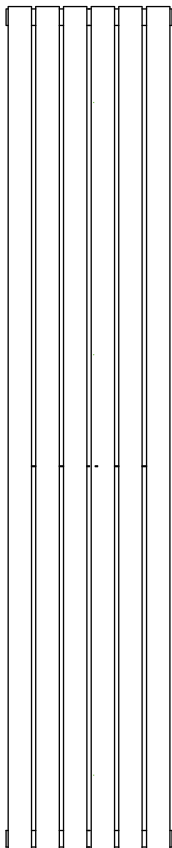

Apply for following models

Please keep this page for your online registration.

No.





CAUTION

1. Follow installation instructions carefully to ensure unit is properly attached to the wall.
2. To avoid a possible fire hazard, it is essential unit is mounted in accordance with guidelines stated in the instruction.
3. Radiator is intended for indoor use only, do not place radiator inside a shower, steam room, or wherever unit would be exposed to water.

TECHNICAL DATA

It should only be filled with water, and at a temperature below 100°C (212°F). See table below for installation requirements. If the temperature exceeds 48°C (or 120°F), please install a warning sign near the product to avoid burning and scolding accidents.

 
Temperature: $0^{\circ}\text{C} < t \leq 100^{\circ}\text{C}$

Comments: If ambient temperature drops below 1°C ,
drain out the water to prevent freezing.

Important

Wipe the surface clean with a soft, damp cloth. Never use abrasive cleaners on this product as they will damage the surface.

TOOLS YOU MIGHT NEED




Screwdriver



Pencil



 Adjustable Wrench



Rubber Hammer



 
Glove



Tape Measure



Spirit Level



Electric Drill

IMPORTANT CHILD SAFETY NOTE

Important: Please note that you are 100% legally responsible for your own child's safety at home. Once the radiator is installed, it can become a hazard for children as a) This radiator is not designed to support unreasonable extra weight, such as that of a child, and b) The radiator becomes hot during use. Due to this, we must stress that you should not allow children to climb/grab/play with the radiator or rails, as this can cause accident or injury for the child, from heat, falling, or the radiator being pulled off the wall.

BEFORE INSTALLATION

- Observe all local plumbing and building codes.
- Shut off the main water supply.
- Read these instructions carefully to ensure proper installation.
- Check to make sure you have the following parts indicated below.



CAUTION

Please check you have all of these items in the box.



Wall bracket

X4



 
Silicone Gasket

X4



Masonry Wall Plug

X8



Long Screw

X8



Airvent

X1



 
Blanking plug

X1



O-ring

X2



Body

X1



CAUTION


Important Notice: This radiator might be welded with block for better heating performance. Thus, before mounting, kindly check the horizontal tube to see if you can see through the tube. If not, there is block welded inside. This side with block must be mounted at the bottom.

INSTALLATION PROCEDURE

1

Position the towel rail in desired location, check for level and mark four equal positions for the brackets.

Make sure the radiator is installed vertically.

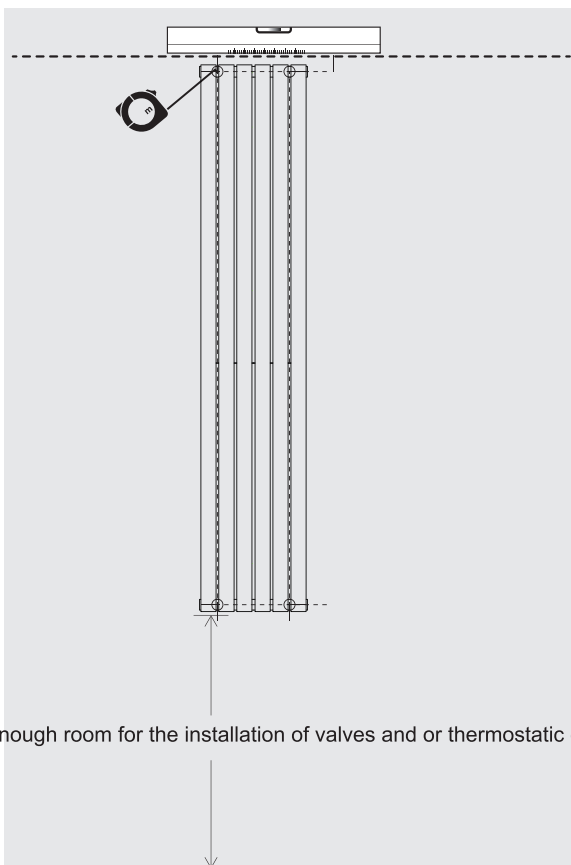

Allow enough room for the installation of valves and or thermostatic controls




CAUTION

Before installation place a dust sheet on the floor to prevent losing any small parts.

INSTALLATION PROCEDURE


2

Drill holes in wall and insert wall plugs. N.B for false or studed walls different fixings can be purchased from your local DIY store.

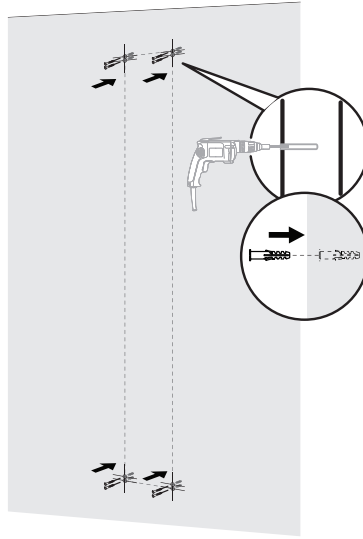

3


Drill holes in wall and insert wall plugs. N.B for false or studed walls different fixings can be purchased from your local DIY store.

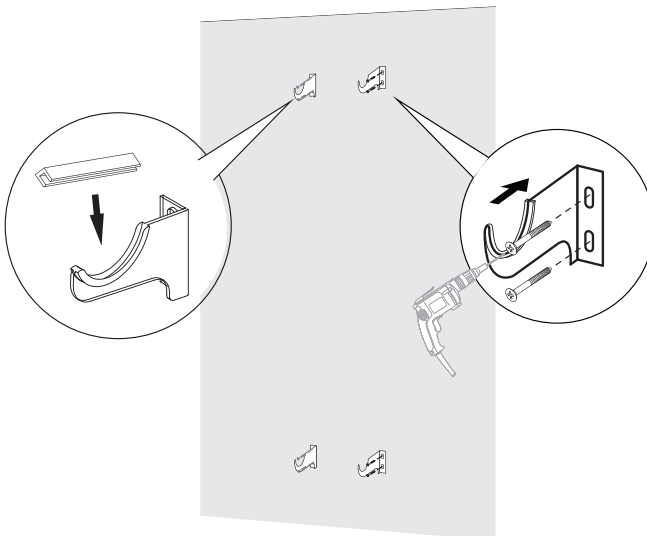

INSTALLATION PROCEDURE

4

Wrap PTFE tape around blanking plug and bleeder valve and screw into top of radiator tighten with a spanner.

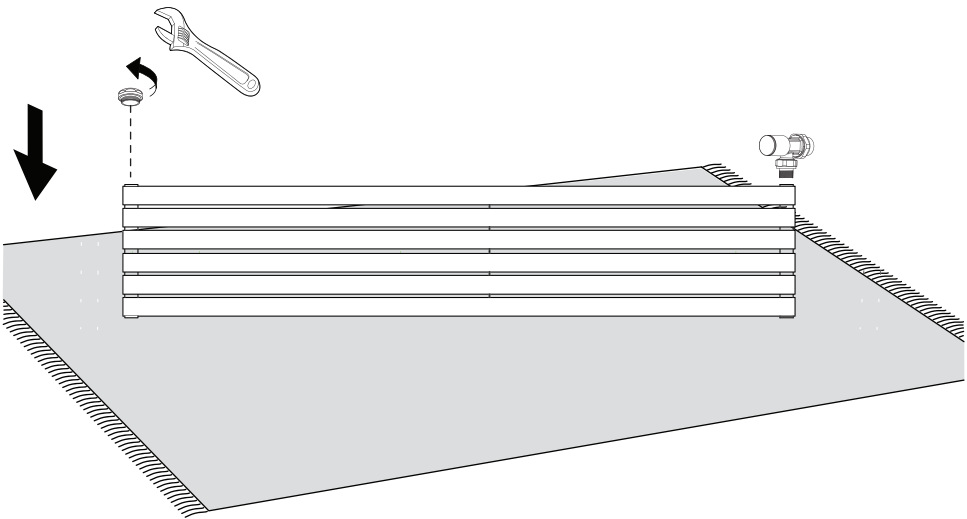

Apply PTFE tape to valves and screw into bottom of radiator tighten with a spanner.


INSTALLATION PROCEDURE

5

Rest radiator onto bracket and connect valves to household supply.

Importance: Radiator might be welded with flow block inside for better hot water circulation.

Check before mounting it. If the round tube can not be seen through with bare eyes, this side must be mounted at the bottom. Inlet valve & outlet valve shall be mounted at the bottom as well.

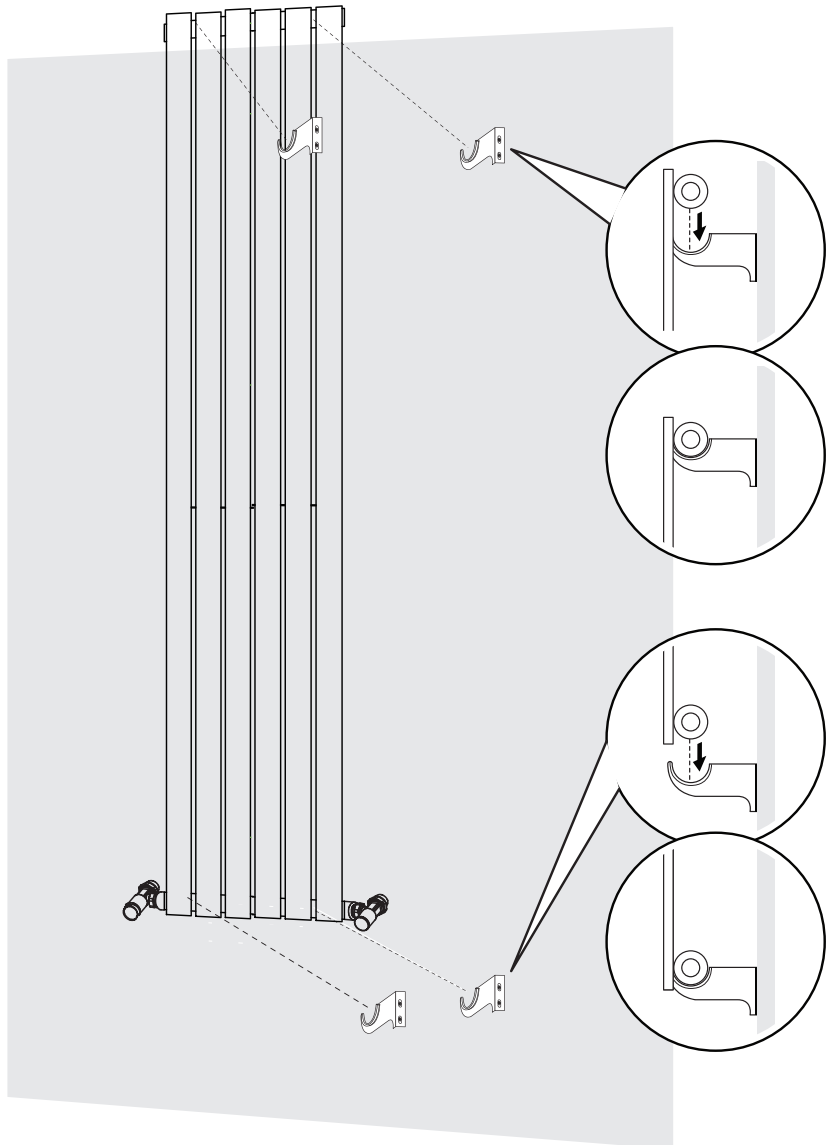

INSTALLATION PROCEDURE

6

For Horizontal Mounting

This radiator can be mounted horizontally if proper brackets are supplied or got. Make sure that the centre piece of the flow block has been removed as below illustration before mounting. Other processes are the same as before installation procedure.

Important Remark (If you want to install the radiator horizontally):



**Specially designed
flow block**



**After removing the
centre block piece**




**Using a hammer & steel rod to remove the centre
block piece**

This radiator is welded with specially designed flow block to increase heating performance, when mounted vertically. If you want to install the radiator horizontally, make sure to remove the centre block piece by using a hammer & 10mm steel rod.


INSTALLATION PROCEDURE

7


Horizontal Mounting

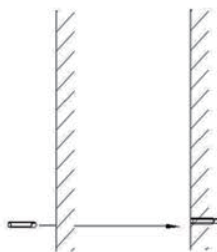


Step 1: Pinpoint the positions on the wall then drill four holes accordingly and fix the wallplugs into the wall.

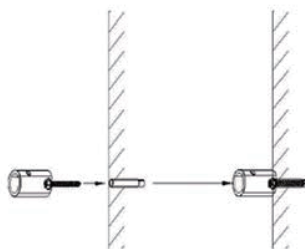

Step 2: Connect the bracket socket to the wall with screws.

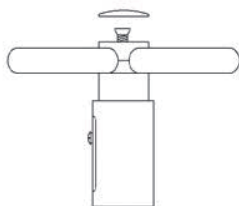

Step 3: Assemble the bracket to the radiator

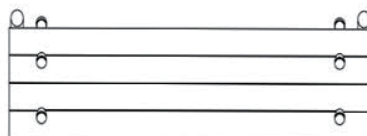

Step 4: Mount the radiator to the wall and tighten the screws in the brackets.

AFTER INSTALLATION

Use a screwdriver to open the air vent, open the valve and let the water rush into radiator.

Check all connection for leaks.

Once water overflows from the air vent, there is no air in the tube.

Use a screwdriver to close the air vent, turn on the valve and the radiator is ready for use.

CARE & CLEANING

Radiators are made from steel and should not be cleaned with corrosive or scouring cleaning agents.

TROUBLE SHOOTING

When your radiator doesn't function, knowing basic radiator troubleshooting can save you from the stress and the hassles of a non-functioning radiator. Here is a guide to solve the most common problems associated with these electric home heaters.

Problem	Cause	Action
Cold spots on the radiator unit	-Water is not flowing through radiator properly	1. Check to make sure there is no trapped air inside the radiator. "Bleed" the radiator to release air. 2. Make sure the valve is fully open to allow water to run freely. Some radiator may need diverter for water to flow properly around the unit.
Leak on the radiator	-Valve nut is loose -Welding problem	-Tighten the valve nut -Replace radiator
Sound of whistling or water whooshing	-Radiator was not properly balanced when it was installed	see website FAQ please
Clanking sound	-The radiator was installed in a space that doesn't allow for pipe expansion	see website FAQ please

Child Safety Notice

Please note that you are 100% legally responsible for your own child's safety at home. Once installed, the radiator can become a hazard for children as this radiator is not designed to support unreasonable extra weight, additionally the radiator becomes hot when in use which may lead to scalding or burns. We must stress that you should not allow children to climb/grab/play with the radiator or rails, as this can cause accident or injury for the child from heat, falling, or the radiator being pulled off the wall.

Before installing the product, please read carefully the following WARNINGS:

- Special care must be taken if children or vulnerable adults are present;
- Children must be kept away from this appliance unless they are constantly supervised. Children should not play with the appliance. Cleaning and maintenance should not be performed by children.
- Brackets kit includes standard wall-plugs suitable for solid walls only! Please use suitable fixings and bracing for non-solid walls.
- To prevent damage to the product, remove packaging carefully.
- Silicone is not a suitable seal for pressurised systems and should not be used.
- The radiator must not be connected to freshwater system.
- **IMPORTANT** do not heat up the radiator without first removing all packaging, elements used in radiators must not be operated dry.
- To prevent the deterioration of the finish, do not hang humidifiers made of porous or corrosive materials on the radiator.
- Clean the radiator with a damp soft cloth. Never use corrosive or abrasive cleaning agents based on acidic substances.
- The company is not liable for any damage to persons or properties, due to non-compliance with the above.